


Using our Pump to Tank Connector Kit

Allows for seamless connection from your pump to your water tank

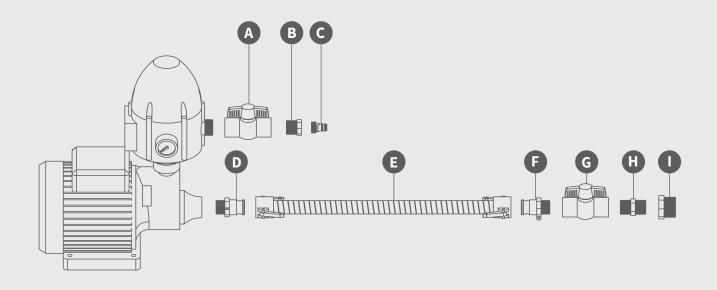

WHAT'S INCLUDED IN THE KIT?

1. Connection to pump water outlet

- A 25mm Ball Valve
- B 25/20mm Reducer
- **c** 20mm Accessory Adaptor

2. Connection from pump to flexi-hose

D 25mm Polyprop Male Coupler

3. Flexi-hose assembly

- **E** Hose + 2 x Female Polyprop Couplers
- 4. Connection from tank to flexi-hose
- **F** 25mm Polyprop Male Coupler
- **G** 25mm Ball Valve
- **H** 25mm Barrel Nipple
- 40/25mm Reducer

SEAMLESSLY CONNECT THE UNIT TO A VARIETY OF JOJO TANKS


Note:

- This connector kit is only suitable for use with our 0.37, 0.55, 0.6 and 0.75kW Booster Pumps
- All connections and fittings from pump to tank should not be less than 25mm
- It is advised to only make use of HDPE piping and high-pressure fittings



Using our Booster Pump to Tank Connector Kit

Allows for seamless connection from your pump to your water tank

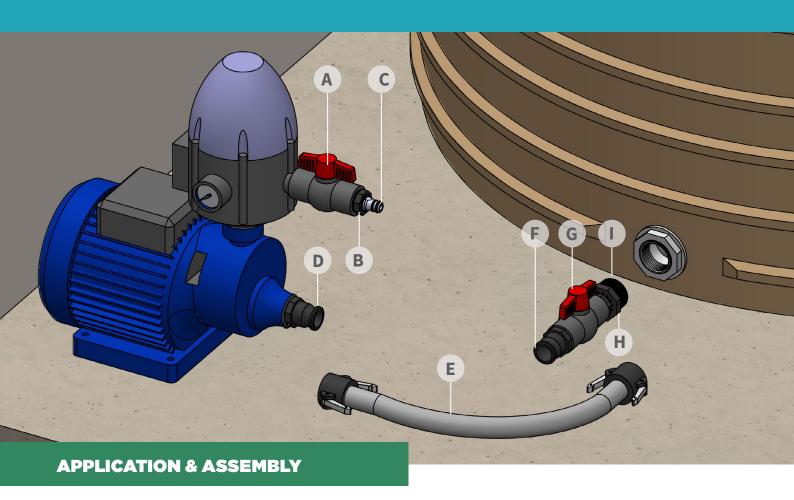

01

Screw ball valve assembly (A,B & C) onto the pump's pressure control valve

05

Connect hosepipe to accessory adaptor **(C)**

02

Screw 25mm male coupler **(D)** into your Booster Pump (0.37 or 0.75kW)

06

Open both ball valves (A & G) to release the water supply

03

Screw ball valve assembly **(F,G,H & I)** into existing tank fitting (outlet at the bottom)

07

Plug electrical cord into power supply and switch on to activate your pump

04

Attach flexi-hose assembly **(E)** to the male couplers **(D & F)**

08

To stop pump, close ball valve (A) connected to the pump's control valve