


Using our Pump to Tank Connector Kit

Allows for seamless connection from your pump to your water tank

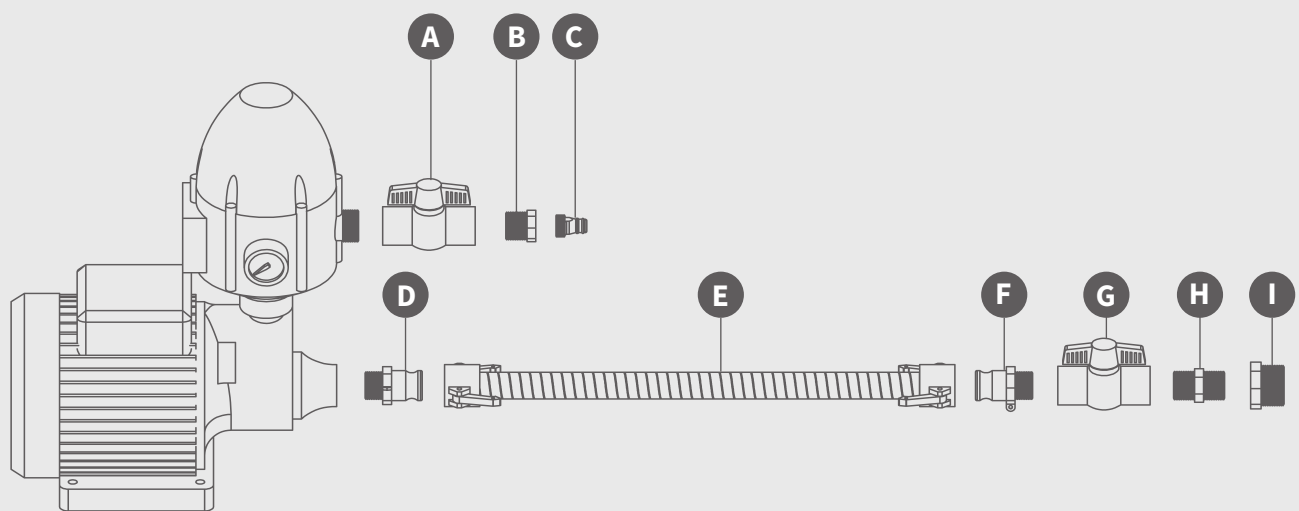

WHAT'S INCLUDED IN THE KIT?

1. Connection to pump water outlet

- A** 25mm Ball Valve
- B** 25/20mm Reducer
- C** 20mm Accessory Adaptor

2. Connection from pump to flexi-hose

- D** 25mm Polyprop Male Coupler

3. Flexi-hose assembly

- E** Hose + 2 x Female Polyprop Couplers

4. Connection from tank to flexi-hose

- F** 25mm Polyprop Male Coupler
- G** 25mm Ball Valve
- H** 25mm Barrel Nipple
- I** 40/25mm Reducer


SEAMLESSLY CONNECT THE UNIT TO A VARIETY OF JOJO TANKS

Note:

- This connector kit is only suitable for use with our 0.37 and 0.75kW Booster Pumps
- All connections and fittings from pump to tank should not be less than 25mm
- It is advised to only make use of HDPE piping and high-pressure fittings

Using our Pump to Tank Connector Kit

Allows for seamless connection from your pump to your water tank

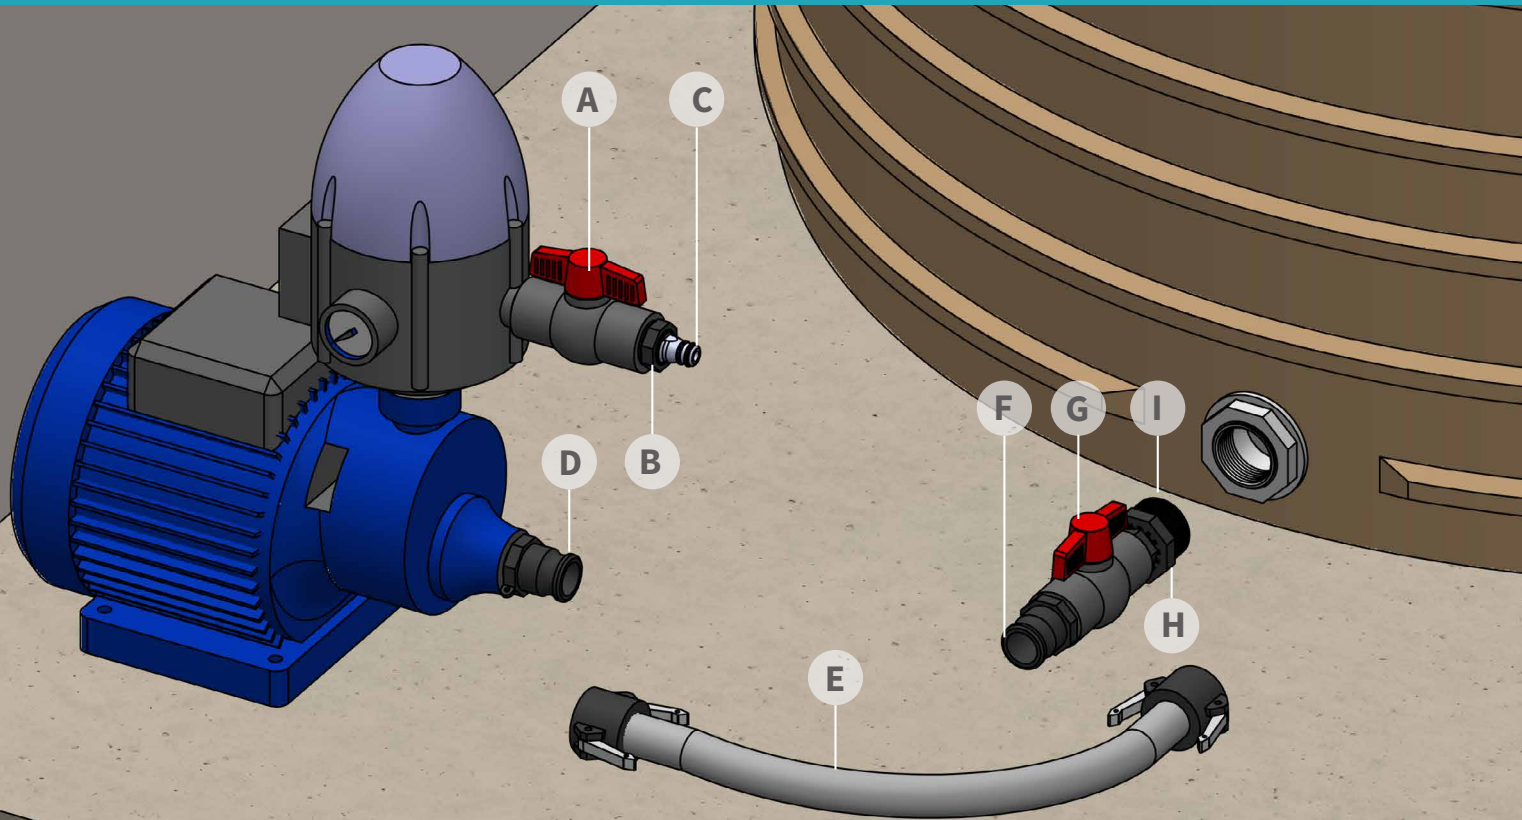

APPLICATION & ASSEMBLY

- | | | | |
|---|--|--|---|
| <p>01</p> <p>Screw ball valve assembly (A,B & C) onto the pump's pressure control valve</p> | <p>02</p> <p>Screw 25mm male coupler (D) into your Booster Pump (0.37 or 0.75kW)</p> | <p>03</p> <p>Screw ball valve assembly (F,G,H & I) into existing tank fitting (outlet at the bottom)</p> | <p>04</p> <p>Attach flexi-hose assembly (E) to the male couplers (D & F)</p> |
| <p>05</p> <p>Connect hosepipe to accessory adaptor (C)</p> | <p>06</p> <p>Open both ball valves (A & G) to release the water supply</p> | <p>07</p> <p>Plug electrical cord into power supply and switch on to activate your pump</p> | <p>08</p> <p>To stop pump, close ball valve (A) connected to the pump's control valve</p> |