


How to Replace the PC Board on your JoJo Booster Pump Flow Controller

You will require the following:

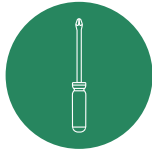

**1 X STAR
SCREW DRIVER**



**1 X JOJO
REPLACEMENT
PC BOARD**

Note: Our Booster Pump PC Board is only suited for use with the following JoJo Booster Pumps:

- 0.37kW Booster Pump
- 0.55kW, 0.75kW & 1.1kW Centrifugal Pumps
- 0.6kW Self-priming Jet Pump

STEP 1

Ensure that your pump is disconnected from the power source.



STEP 2

Unscrew the four screws holding the terminal box cover in place.




STEP 3

Remove the terminal box cover.




STEP 4

Disconnect the wires from the terminals and remove from the terminal box.

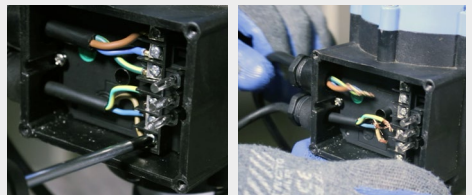


STEP 5

Unscrew the two screws holding the PC Board in place.

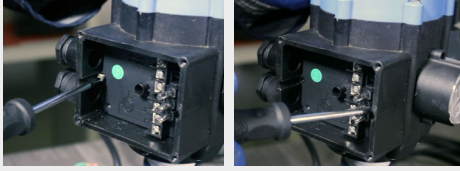


STEP 6

Remove the PC Board.

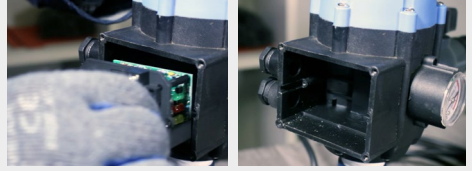

STEP 7


Insert the replacement JoJo PC Board.

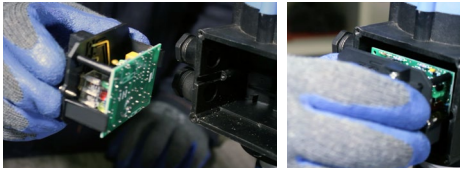

STEP 9


Secure the wires to the terminals as follows:
a) the wires from the pump through the bottom grommet b) the wires from the three-point plug through the top grommet.

Note: ensure that the correct colour sequence is followed as shown below.

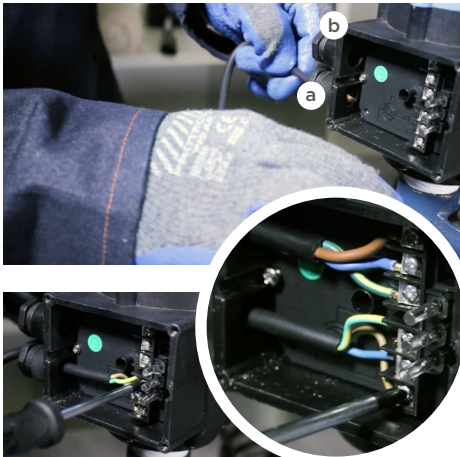


STEP 8

Insert and fasten the two securing screws on both sides of the PC Board.

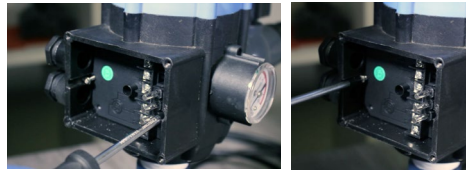

STEP 10

Replace the terminal box cover, and fasten the four screws holding it in place.

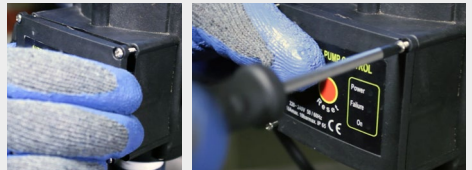

STEP 11

Your pump is now ready for use and reconnection to your power supply.



Scan this QR Code to watch the instructional video.