


# How to Replace the PC Board on your JoJo Booster Pump Flow Controller

You will require the following:

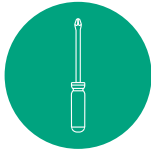

**1 X STAR  
SCREW DRIVER**



**1 X JOJO  
REPLACEMENT  
PC BOARD**

**Note:** Our Booster Pump PC Board is only suited for use with the following JoJo Booster Pumps:

- 0.37kW Booster Pump
- 0.55kW, 0.75kW & 1.1kW Centrifugal Pumps
- 0.6kW Self-priming Jet Pump

## STEP 1

Ensure that your pump is disconnected from the power source.



## STEP 2

Unscrew the four screws holding the terminal box cover in place.




## STEP 3

Remove the terminal box cover.




## STEP 4

Disconnect the wires from the terminals and remove from the terminal box.

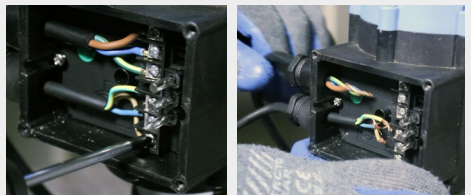


## STEP 5

Unscrew the two screws holding the PC Board in place.

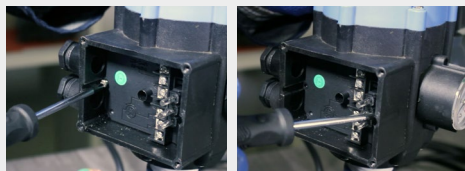


## STEP 6

Remove the PC Board.

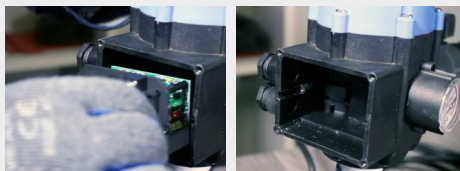

## STEP 7

Insert the replacement JoJo PC Board.

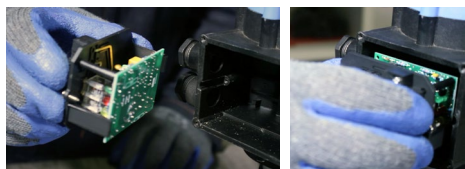

## STEP 9

Secure the wires to the terminals as follows:


**a)** the wires from the pump through the bottom grommet **b)** the wires from the three-point plug through the top grommet.

**Note:** ensure that the correct colour sequence is followed as shown below.




## STEP 8

Insert and fasten the two securing screws on both sides of the PC Board.

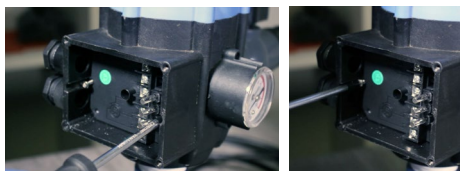

## STEP 10

Replace the terminal box cover, and fasten the four screws holding it in place.

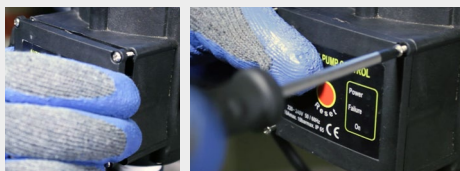

## STEP 11

Your pump is now ready for use and reconnection to your power supply.



Scan this QR  
Code to watch the  
instructional video.