

UNIVERSAL PUMP TO TANK CONNECTOR KIT




Fits 25mm, 32mm or 40mm pump connections

- ✓ Provides a seamless pump-to-tank connection
- ✓ Includes all accessories for easy installation



WHAT'S IN THE BOX?		
1. Connection to pump outlet	2. Connection from pump inlet to flexi-hose	4. Connection from tank to flexi-hose
A Ball valve assembly pre-fitted with:	D 40mm barrel nipple (for 40mm female pump connection)	I Ball valve assembly pre-fitted with:
A1. 40mm ball valve	E 32mm fitting	I1. 40mm polyprop male coupler
A2. 40mm barrel nipple (for 40mm female pump connection)	40/32mm reducing nipple (for female connection)	I2. 40mm ball valve
B 32mm fitting	F 25mm fitting	I3. 40mm barrel nipple
40/32mm reducing nipple (for female connection)	40/25mm reducing nipple (for female connection)	i Important
C 25mm fittings	G 40mm polyprop female coupler	• All connections from pump to tank should not be less than 40mm.
C1. 40/25mm reducing nipple (for female connection)	3. Flexi-hose assembly	• Use HDPE piping and high-pressure fittings only.
C2. 40/25mm reducer (for male connection)	H 40mm hose (500mm in length) + 2x female quick couplers	• Use PTFE thread tape for threaded connections to help prevent leaks.

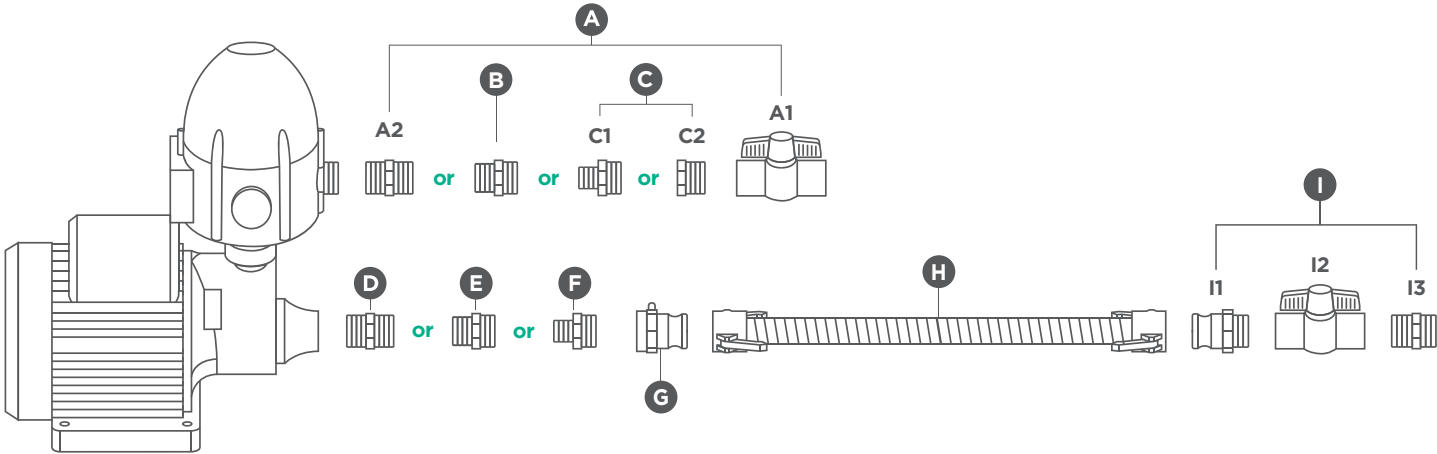


APPLICATION & ASSEMBLY

- 01** Screw the 40mm ball valve assembly **(I)** into the existing JoJo tank outlet (located at the bottom of the tank).
- 02** Screw the required inlet fitting **(D, E or F)**, according to your connection size, into the JoJo Booster Pump inlet. Then connect the female coupler **(G)**.
- 03** Fit the flexi-hose assembly **(H)** over couplers **(G)** and **(I1)**, then secure it by pushing down the clamps on both sides.
- 04** Screw the 40mm ball valve assembly **(A)** onto the pump outlet. For 25mm or 32mm connections, remove the 40mm barrel nipple **(A2)** and fit the required connector **(B, C1 or C2)**.
- 05** Connect your pipework to the 40mm ball valve assembly **(A)**. For smaller pipe sizes, use the appropriate reducer.
- 06** Open ball valves **(A1)** and **(I2)** to release the water supply. Prime the pump according to the pump manual.
- 07** Plug the electrical cord into a power supply and switch on the pump. To stop the pump, close ball valve **(A1)**.


Disclaimer: Product appearance may vary, subject to stock availability. While colours may differ, consistent quality is always guaranteed.

SEAMLESSLY CONNECT ANY JOJO BOOSTER PUMP TO YOUR JOJO TANK

1. Connection to pump outlet

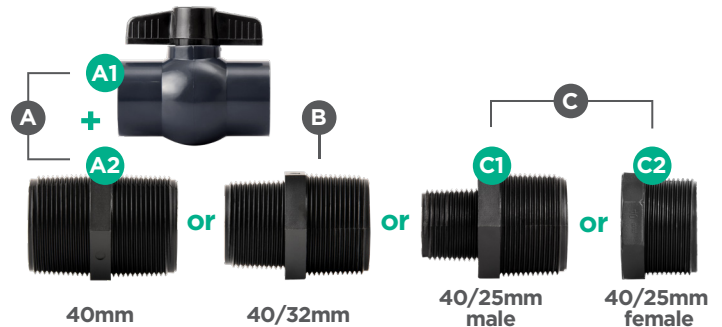

2. Connection from pump inlet to flexi-hose

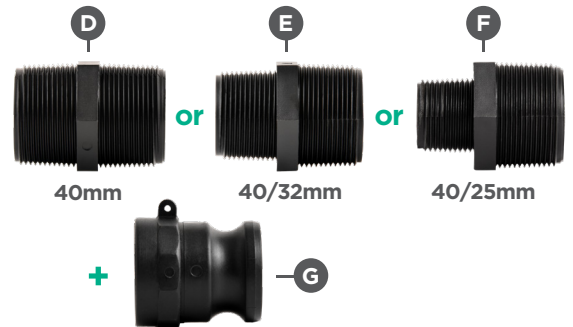

3. Flexi-hose assembly



4. Connection from tank to flexi-hose

